


. Shows the connections of the Elma switch to the TVC transformer

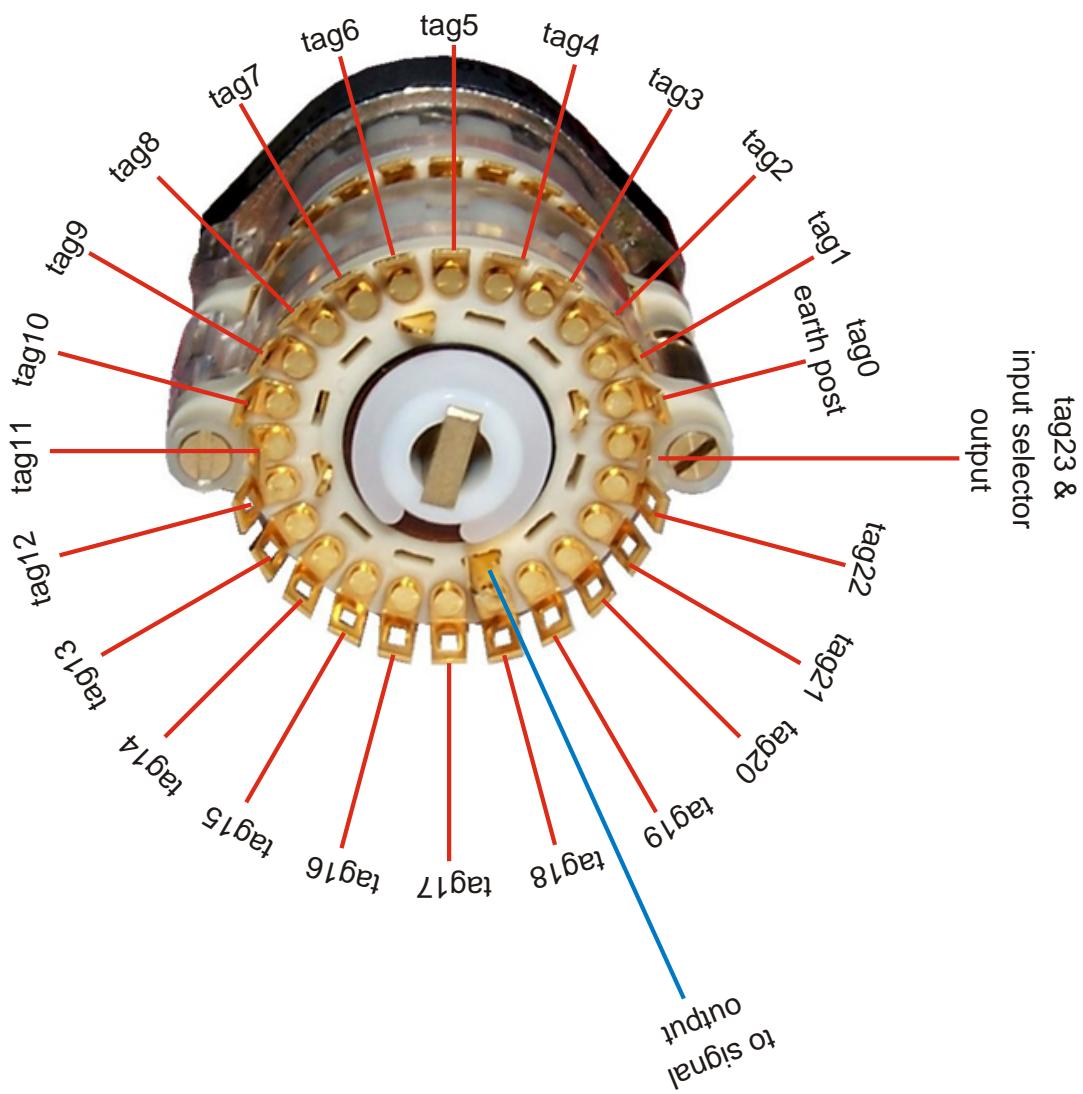

. Step 1: connect up the right channel transformer first, then take the switch apart and place the empty wafer at the top ready to solder the left channel transformer.

